

Linux RetroArch User Guide

ID: RK-KF-YF-367

Release Version: V1.0.0

Release Date: 2020-06-12

Security Level: ☐Top-Secret ☐Secret ☐Internal ☒Public

DISCLAIMER

THIS DOCUMENT IS PROVIDED "AS IS". ROCKCHIP ELECTRONICS CO., LTD. ("ROCKCHIP") DOES NOT PROVIDE ANY WARRANTY OF ANY KIND, EXPRESSED, IMPLIED OR OTHERWISE, WITH RESPECT TO THE ACCURACY, RELIABILITY, COMPLETENESS, MERCHANTABILITY, FITNESS FOR ANY PARTICULAR PURPOSE OR NON-INFRINGEMENT OF ANY REPRESENTATION, INFORMATION AND CONTENT IN THIS DOCUMENT. THIS DOCUMENT IS FOR REFERENCE ONLY. THIS DOCUMENT MAY BE UPDATED OR CHANGED WITHOUT ANY NOTICE AT ANY TIME DUE TO THE UPGRADES OF THE PRODUCT OR ANY OTHER REASONS.

Trademark Statement

"Rockchip", "瑞芯微", "瑞芯" shall be Rockchip's registered trademarks and owned by Rockchip. All the other trademarks or registered trademarks mentioned in this document shall be owned by their respective owners.

All rights reserved. ©2020. Rockchip Electronics Co., Ltd.

Beyond the scope of fair use, neither any entity nor individual shall extract, copy, or distribute this document in any form in whole or in part without the written approval of Rockchip.

Rockchip Electronics Co., Ltd.

No.18 Building, A District, No.89, software Boulevard Fuzhou, Fujian, PRC

Website: www.rock-chips.com

Customer service Tel: +86-4007-700-590

Customer service Fax: +86-591-83951833

Customer service e-Mail: fae@rock-chips.com

Preface

Overview

This document is going to introduce how to use Retroarch.

Product Version

Chipset	Kernel Version
RK3036/RK3128/RK3326/RK3328/RK3399	Linux4.4

Intended Audience

This document (this guide) is mainly intended for:

Technical support engineers

Software development engineers

Revision History

Version	Author	Date	Change Description
V1.0.0	Zack.Huang	2020-06-12	Initial version

Contents

Linux RetroArch User Guide

1. Overview
2. Source Code Modules and Custom Compilation
 - 2.1 RetroArch Source Code Modules Introduction
 - 2.2 Custom Compilation RetroArch
3. Run RetroArch
 - 3.1 Use Command Line to Start RetroArch
 - 3.2 Use a Mouse to Start RetroArch

1. Overview

Retroarch is a powerful cross platform simulator, it can not only simulate as many different game hosts, but also provide open source code, which can be ported to major operating platforms such as Linux, Window, and Android. The implementation of RetroArch API includes video game system simulators, media players, game engines, and more general 3D programs. The program is instantiated as a dynamic library, called "Libretro Core". The libretro core written in C or C++ can run on many platforms seamlessly and hardly needed to porting. "Libretro Core" contains mainstream emulator cores such as 4do, 81, mane, etc., which can perfectly run games in many formats such as gba.

2. Source Code Modules and Custom Compilation

2.1 RetroArch Source Code Modules Introduction

RetroArch source code is located in the SDK/buildroot/output/rockchip_rkxxxx/build/retroarch-xxxxxxx

RetroArch modules index (it is going to introduce several core modules below selectively):

audio	Audio module code
bootstrap	Bootstrap front-end framework code
camera	Camera module code
cores	Core contains the core libraries supported by RetroArch itself, including ffmpeg, imageviewer, mpr libraries, etc.
menu	Menu code of RetroArch
network	Network module code
wifi	wifi module code

There are many detailed introduction to other modules in the official document <https://docs.libretro.com/>, please refer to them when needed.

2.2 Custom Compilation RetroArch

```
make menuconfig
```

Select Target packages -> Libretro cores and retroarch -> retroarch.

You can select the emulator core you need in Target packages -> Libretro cores and retroarch -> Retroarch Cores.

You can also select Target packages -> Libretro cores and retroarch -> retroarch assets to load the default UI resources.

Exit menuconfig after selection:

```
make savedefconfig
```

Build:

```
make retroarch
```

Notice: when you use custom compilation RetroArch, the firmware space occupied by the rootfs containing RetroArch will become larger, you need to modify the SDK/device/rockchip/rkxxxx/parameter-buildroot.txt file, (rkxxxx indicates the chip model you used) to expand the partition of rootfs. For detailed modification methods, please refers to Chapter 3 "文件内容说明" in docs/tools/"Rockchip-Parameter-File-Format-Version1.4.pdf".


3. Run RetroArch

3.1 Use Command Line to Start RetroArch

Enter the command line of the target board: (start the main interface of RetroArch)

```
/usr/bin/retroarch -c /oem/retroarch.cfg
```

Below is a screenshot of the RetroArch start interface:

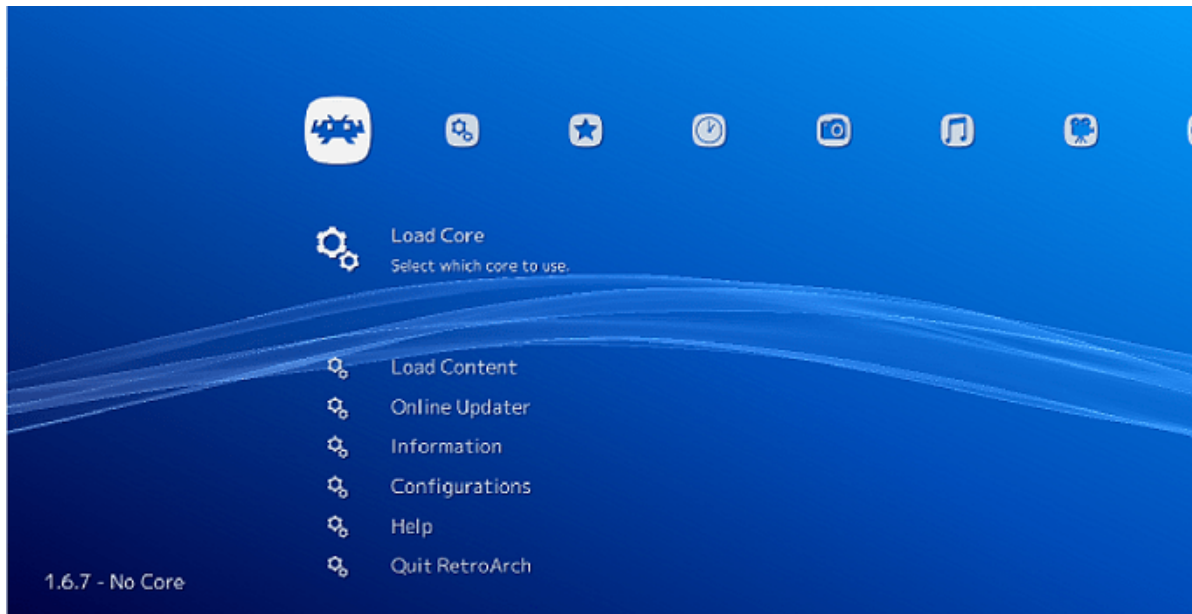


We store the set configuration file retroarch.cfg in /oem, and the emulator core file in /usr/lib/libretro/. Of course, you can also specify the load core file and game ROM when starting: (start the game directly)

```
/usr/bin/retroarch -c /oem/retroarch.cfg -L /usr/lib/libretro/*.so<emulator core> <game_rom>
```


3.2 Use a Mouse to Start RetroArch

Connect the target board, mouse, display device and other peripherals. When the display desktop appears after the system is started, the SDK will automatically generate the RetroArch icon on the desktop, double-click to open it.

In the RetroArch start interface, you need to load the emulator core first:

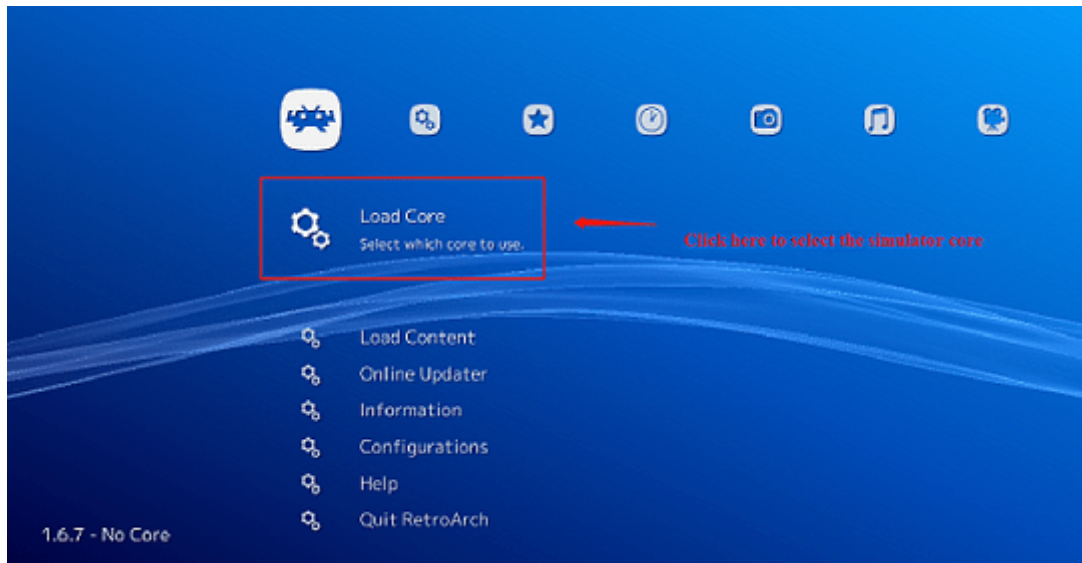

Then you can choose the core you need:

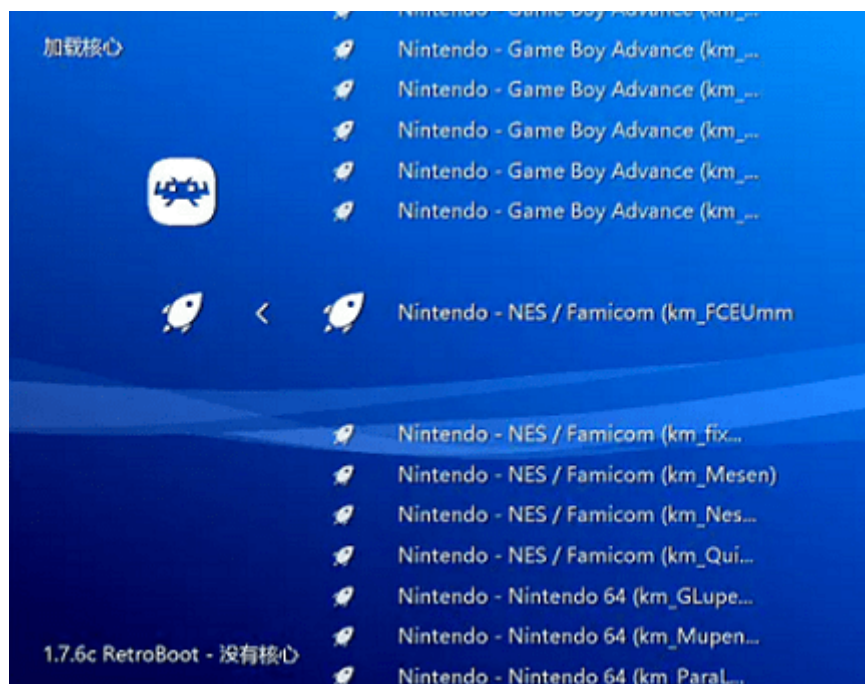

After loading the emulator core, you need to choose to load the game content:

